
WEIDMANN

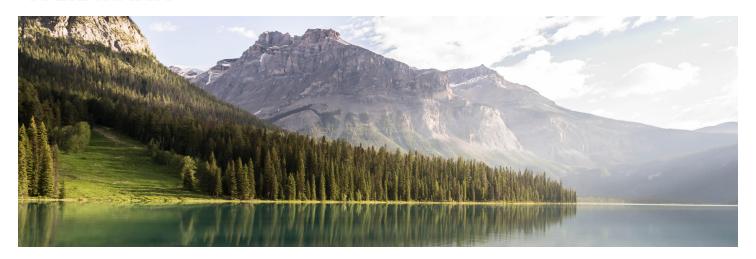

Handling Instructions

Celova® Microfibrillated Cellulose Gels

Celova® gel products are aqueous suspensions of 3% microfibrillated cellulose and 97% water. After production the products are disinfected and have a shelf-life of 6 months in their original, sealed packaging. To preserve the naturality of Celova® products no biocides are added. That means any contamination can lead to microbial growth. To ensure the quality over time certain rules apply for handling.

Contamination Risks:



Opening of original, sealed containers



Taking samples



Container left open after use



Transfer of product into smaller containers



Condensation water

Handling Recommendations:



Mix before use to homogenize



Disinfect any tools or containers with 70% Ethanol



Store at ambient temperatures



Do not store in direct sunlight



Ideally use the whole container at once

If you have further enquiries please do not hesitate to contact the Weidmann Fiber Technology Team under: info@weidmannfibertechnology.com